


■ Instruction to select print

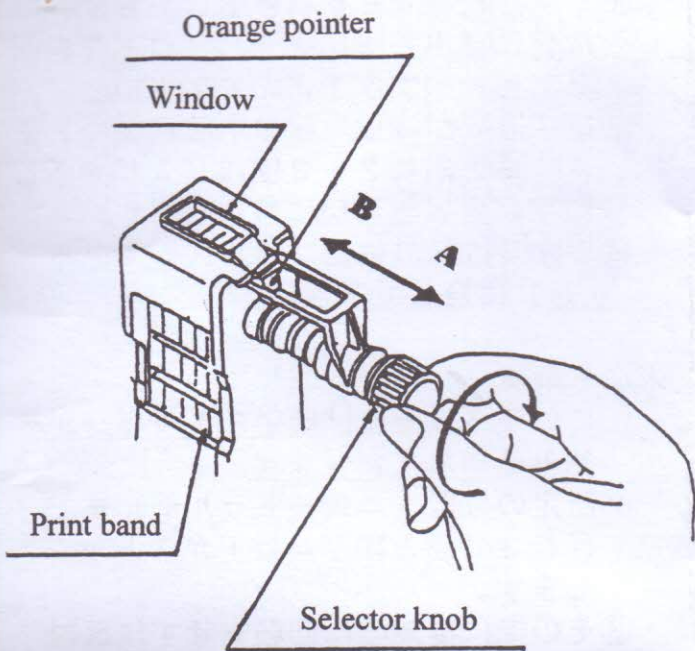

※ How to select print

- ① Pull the selector knob out and align with the required letter.
- ② Push and pull the knob between A and B for 2 ~ 3 times to arrange the letters neatly.
- ③ Push back the knob to the original position (retracted position).

※ Caution

- ① The stopper is installed in this labeler.
- ② Therefore the print band stops when the knob is turned to the fixed position (neutral part).
- ③ In that case don't turn it by force. Please turn it reversely.

UNIESERVICE.

Tel. 0485-341200

www.unieservice.nl

LOADING DIAGRAM

CAUTION

To open or to close the Bottom Cover keep lifting up the Cover end as illustrated.

